

RSM internal view



Makes 6 Rocket-Shaped Suppositories

- Mold Plates: hard anodized aluminum for long-life; flat surfaces precision machined to prevent leakage and for easier mold release. All other parts stainless steel (Inox) 316
- Ejector Plate to aid suppository removal & create air vent in suppository
- Anodized parts discolor in automatic dishwashers and are engraved not for dishwasher use to prevent operator error.

Item Code: X-MSM2159H

\$410.00

Visit www.torpac.com for more information on this product

Why Rocket Shaped Suppositories?

- Unique shape ensures medication is in contact with internal and external hemorrhoids.
- Contoured shape reduces risk of suppository being dislocated.
- Side vent allows gas to escape without the suppository being dislocated.
- Use with extended release formulations to treat hemorrhoids with fewer insertions.

Instruction Overview



Start with assembled mold with Ejector plates in place. Melt required quantity of suppository base and add active ingredients. Pour melted base into mold cavities. Allow suppository mixture to cool at room temperature for 30 minutes. Unscrew Locking knobs and separate the Front and Rear Plates. To remove suppositories lift Ejector Plate and slide suppository off.


Mold Specifications

Mold is 7" (18cm) in length, 2" (5.2cm) in width, 4.3" (10.8cm) in height and weighs 2.6lbs (1.2kg).

Formulas

May be used with commercially available bases. Weight in grams/suppository
 Medisca's SPG™ Supposi-Base = 6.6gm or PolyPEG Suppository Base = 8.0gm.
 PCCA Suppository Base A (PEG1450) = 7.6gm/suppository or Base MBK™ (Item 30-1056) = 6.6gm/suppository.
 Cocoa butter ~ 6.2 g/suppository. PEG1500 75% & PEG4000 25% ~ 8.1gm. Glycerinated Gelatin ~ 8.8gm.
 For more information on preparing suppositories visit <https://pharmlabs.unc.edu/labs/suppository/objectives.htm>.

Link provided as a service and does not imply an endorsement by UNC or Dr. Shrewsbury.
 SPG™ is a trademark of Medisca Inc. MBK™ is a trademark of PCCA Inc.

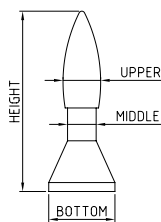

Suppository Specifications

Volume	7mL ± 0.5mL	
Height	2.33"	59.4mm
Upper Diam.	0.47"	12.1mm
Middle Diam.	0.36"	9.2mm
Bottom Diam.	0.84"	21.4mm

Cleaning on reverse

ProMolds by ProFiller



ProMold TTM

ProMold TLM

ProMold RDTM

ProMold ATM

Designed & Manufactured by:

TORPAC®

www.torpac.com • info37@torpac.com
 T: 973-244-1125 F: 973-244-1365
 333 US 46, Fairfield, NJ 07004, USA

Cleaning

Separate Cavity Plate and Tamper Plate before cleaning.

Automatic Dishwasher Restrictions: Hard anodized aluminum may be cleaned on rinse cycle only in an automatic dishwasher. Automatic dishwasher detergents can discolor anodized aluminum. Locking Knobs and Ejector plates are Inox 316 (stainless steel) and are fully dishwasher safe using detergents.

Cleaning Agents: We recommend household dishwashing liquid. Do not use acidic or caustic cleaning solutions. Do not clean with abrasive cloth, gritty materials, or steel wool. Use only a soft cloth or sponge. Surface of anodized aluminum Teflon® coating can be scratched and its non-stick properties damaged.

Isopropyl Alcohol Cleaning or Drying: May be cleaned with isopropyl alcohol. Wipe with a cloth dipped in isopropyl alcohol, then immediately wipe dry with a clean cloth.

Hot Air Drying: May be dried in a hot air oven or using a portable hair dryer.

Autoclave: Autoclave safe.



ProFiller®

Hand-Held systems in 100, 120 & 300 holes



Bench-Top Filler
300 holes



Choose your Orienter



Hand-Held Orienter
3700 / 3700OE



European Style Orienter
3800



Automatic Orienter
X900

Fastest & easiest to use capsule filling systems. Output from 2000-14000 capsules/hour in sizes 000-5, 00el-2el and AAA-D.

ProMixer™

Mixers from 130ml to 10L. A 3-Axis 2L manual shaker-mixer that uses rotation, translation and inversion. Motor driven mixers in two sizes and a selection of drum and V-shells.



3-Axis Mixer



750



10L



V-Shells
220ml-5L



Drum Shell
130ml-10L

ProMold™

Anodized Aluminum molds. Available in standard & custom sizes.



TTM
Tablet & Triturate



TLM
Troche & Lozenge



RDTM
Rapid Dissolve Tablet



RSM
Rocket Suppository




ATM
Animal Treat

Other Equipment




ProTRM™
Three Roll
Ointment Mill

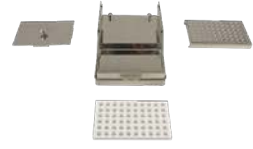

ProCoater™
For enteric film & coating
of capsules & caplets



ProFunnel™
Funnel for precision
capsule filling on a balance

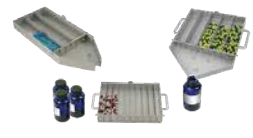

ProCounters
Divide 300 capsules into
batches of 30, 60 or 100