

Custom Sizes

Makes 50 Tablet Triturates

- In 3 standard sizes: 60mg (0.053ml), 100mg (0.090ml) and 200mg (0.181ml).
- Ejector plate for easy removal of tablets.
- Made from anodized aluminum.
- Anodized parts discolor in automatic dishwashers and are engraved not for dishwasher use to prevent operator error.
- Plastic storage case included to protect plates from damage.
- Serial # marked for US DEA compliance.

Visit www.torpac.com for more information on this product

Instructions Overview



Tablet Mold

1. Place plate with holes on a pill tile (flat, beveled glass piece).
2. Make tablet paste and spread into holes using a hard rubber spatula.
3. Allow tablets to harden.
4. Place Mold Plate with hardened tablets over the Ejector Plate with pins and press down to eject tablets. For faster drying, reverse steps 3 & 4 and allow tablets to dry on the pins.


For further instructions & video visit: <http://torpac.com/ttm/>

Specifications & Ordering

Item #	X-TTM 50X060	X-TTM 50X100	X-TTM 50X200
Generic Name	"60 mg"	"100 mg"	"200 mg"
Hole Volume	0.053ml	0.090ml	0.181ml
Hole Diameter	0.181" (4.6mm)	0.236" (6.0mm)	0.236" (6.0mm)
Hole Height	0.126" (3.2mm)	0.126" (3.2mm)	0.252" (6.4mm)
Tablet Weight based on on density of 0.7g/ml	37 mg	63 mg	127 mg
Tablet weight based on density of 1.0g/ml	53 mg	90 mg	181 mg
Mold Dimensions inches	6.0 x 3.0 x 0.9	6.0 x 3.0 x 0.9	6.0 x 3.0 x 0.9
Mold Dimensions cms	15.2 x 7.6 x 2.3	15.2 x 7.6 x 2.3	15.2 x 7.6 x 2.3
Mold Weight	0.60 lbs (275g)	0.62 lbs (285g)	0.84 lbs (385g)
Price	1 mold for \$140. 3+ molds of your choice for \$126 each.		

Cleaning on reverse

ProMolds by ProFiller

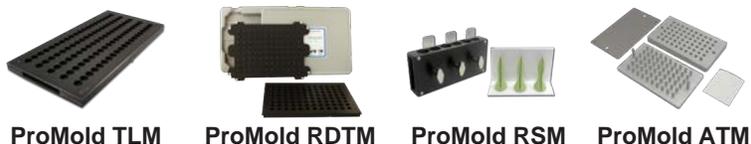

Designed & Manufactured by:

TORPAC®

US - T: +1-973-244-1125 F: +1-973-244-1365
333 US 46, Fairfield, NJ 07004, USA

EU - T: +31-6-30-93-65-27
Jan Campertstraat 19, 6416 SG Heerlen,
The Netherlands.

www.torpac.com
info37@torpac.com

Cleaning

Separate all Plates before cleaning.

Automatic Dishwasher Restrictions: Anodized aluminum (both silver & hard anodized) may be cleaned in an automatic dishwasher on rinse cycle only. Automatic dishwasher detergents can discolor anodized aluminum.

Cleaning Agents: We recommend household dishwashing liquid. Do not use acidic, caustic or abrasive cleaning materials.

Cleaning Wipes: Do not use abrasive cloth or steel wool. Use only soft cloths, sponges, plastic brushes, or nylon pads.

Isopropyl Alcohol Cleaning or Drying: May be cleaned with isopropyl alcohol. Wipe with a cloth dipped in isopropyl alcohol, then immediately wipe dry with a clean cloth.

Hot Air Drying: May be dried in a hot air oven or using a portable hair dryer

Autoclave: Metal parts are autoclave safe.



ProFiller®

Hand-Held systems in 100, 120 & 300 holes



1100



1120



3600



Bench-Top Filler
300 holes



Choose your Orienter



Hand-Held Orienter
3700 / 3700OE



European Style
Orienter 3800



Automatic
Orienter X900

Fastest & easiest to use capsule filling systems. Output from 2000-14000 capsules/hour in sizes 000-5, 00el-2el and AAA-D.

ProMixer™

Mixers from 130ml to 10L. A 3-Axis 2L manual shaker-mixer that uses rotation, translation and inversion. Motor driven mixers in two sizes and a selection of drum and V-shells.



3-Axis Mixer



750



10L



V-Shells
220ml-5L



Drum Shell
130ml-10L

ProMold™

Anodized Aluminum molds. Available in standard & custom sizes.



TTM
Tablet & Triturate



TLM
Troche & Lozenge



RDTM
Rapid Dissolve Tablet



RSM
Rocket Suppository




ATM
Animal Treat

Other Equipment



ProTRM™
Three Roll
Ointment Mill

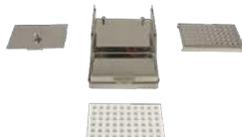

ProCoater™
For enteric film & coating
of capsules & caplets



ProFunnel™
Funnel for precision
capsule filling on a balance



ProCounters
Divide 300 capsules into
batches of 30, 60 or 100